



1、Wiring Instructions

1.1 Front panel terminal wiring diagram


LZ3a-20L Installation dimension diagram (unit: mm)

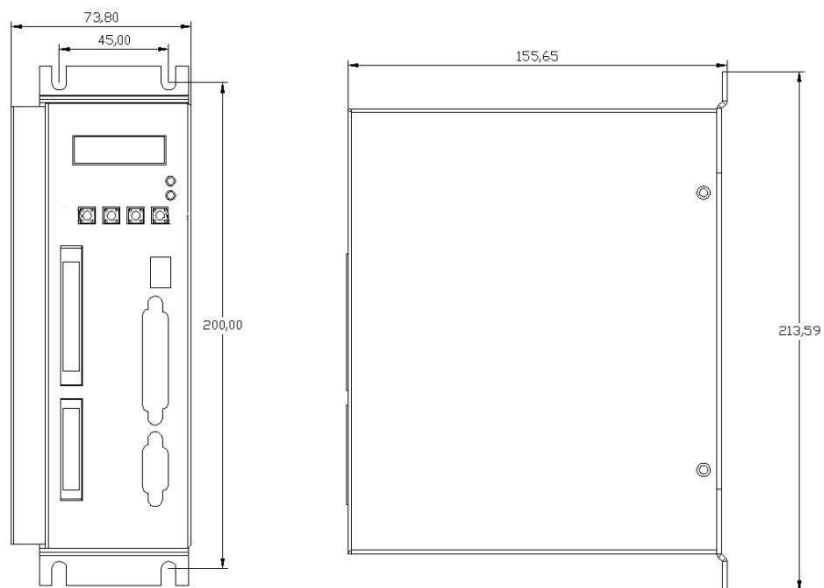


LZ3a-30L Installation dimension diagram (unit: mm)

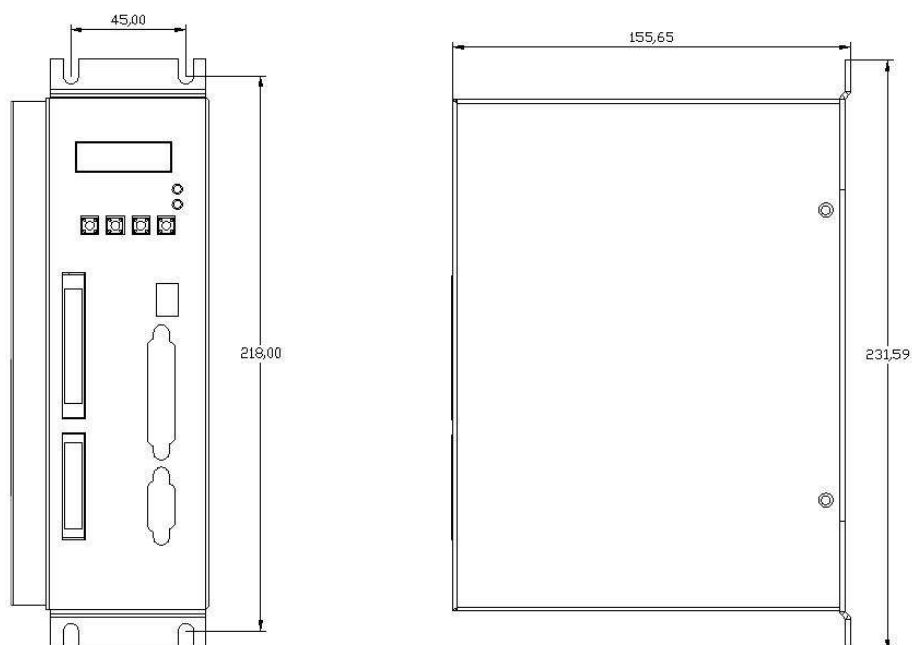


LZ3a-40L/LZ3a-25H Installation dimension diagram (unit: mm)

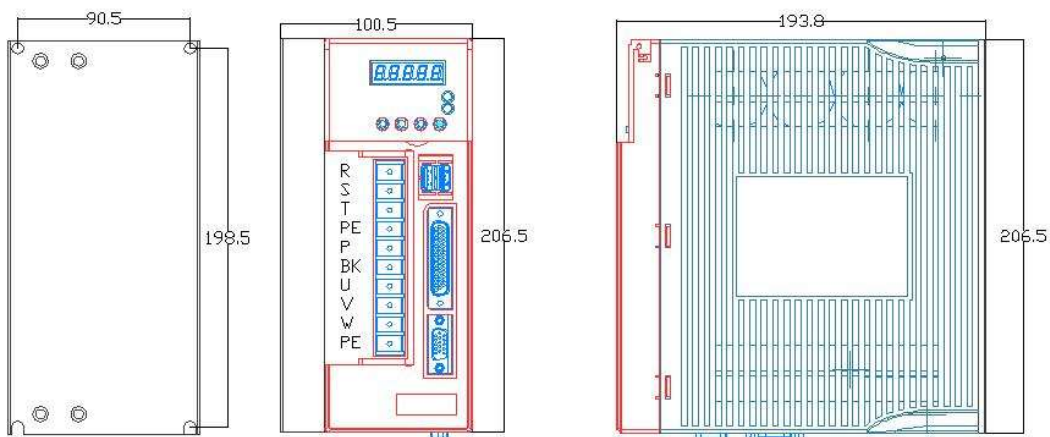

LZ3a-50L/75L and LZ3a-50H/75H Installation dimension diagram (unit: mm)

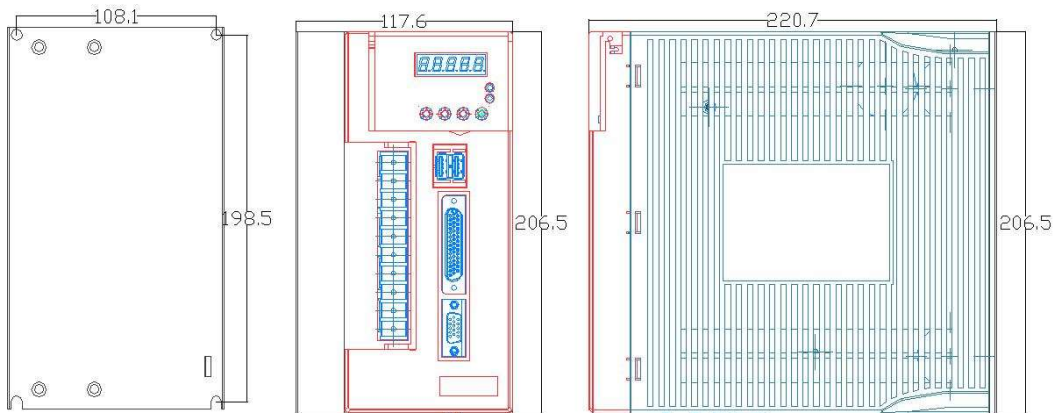

LZ3b-15L/20L Installation dimension diagram

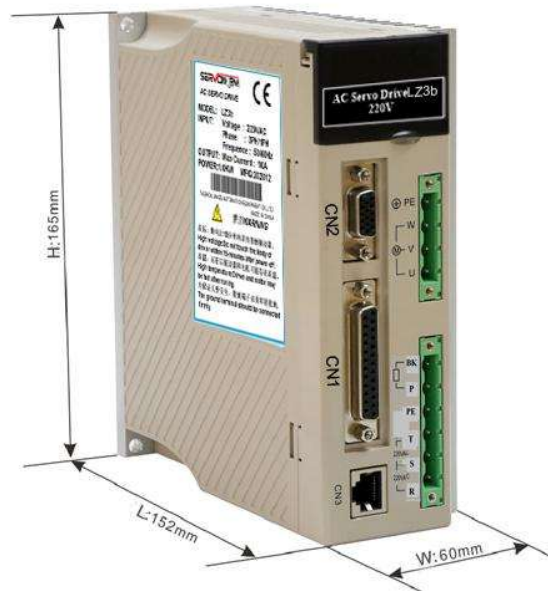

LZ3b-30L Installation dimension diagram

